



DOCKING • ITS UPDATER

FIRMWARE UPDATE

REF. ITSDOCKING



STEP 1 • DOWNLOADS

IMPORTANT

THE SOFTWARE MUST BE UNDER WINDOWS 10 (APPLE INCOMPATIBLE)

DOWNLOAD THE FIRMWARE BY CLICKING ON THIS LINK

[DOWNLOAD FIRMWARE](#)

DOWNLOAD THE UPDATE SOFTWARE BY CLICKING ON THIS LINK


[DOWNLOAD ITS UPDATER](#)

STEP 2 • PROCEDURE OF THE UPDATE

IMPORTANT

DO NOT UNPLUG THE DOCKING DURING THE UPDATE. IN CASE OF DISCONNECTION FROM THE SERVER, THE DOCKING SAVES THE DATA AND RESTORES IT DURING THE AUTOMATIC RECONNECTION TO THE SERVER.

- 1 Switch the Docking to UPDATE mode

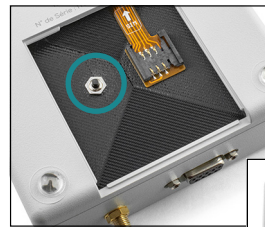

Press the black button next to the SIM card. While holding it, turn on the docking.

Then release the black button when the Docking is on (*blue button lit*).

The button lights up but the screen will remain black.




- 2 Connect Docking to PC via USB/RS232 cable
2 available lengths :

2 METERS : [REF. CO2M](#) 3 METERS : [REF. CO3M](#)



- 3 Select the hardware to be updated

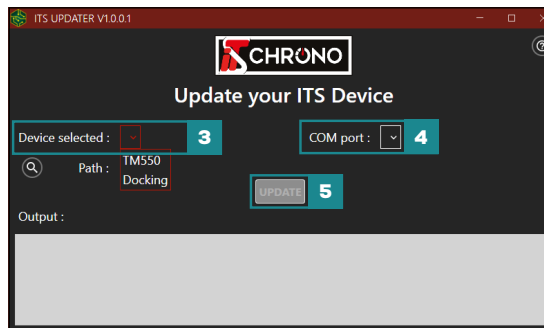

- 4 Find the com port of the Docking among the available com ports via the drop-down menu (all available com ports are displayed)
Select the Docking update **«.BIN»** file

- 5 Press the **UPDATE** button to start the update

MESSAGE : THE UPDATE IS SUCCESSFUL



NOTE : if an error message is displayed, it means that either the com port was not the one the Docking, or the Docking was not in update mode.

ERROR MESSAGE : THE DOCKING IS NOT IN UPDATE MODE

